



Get to Know Your Swivl




Install the Swivl app and any live streaming app you plan to use onto your mobile device.

1 Swivl Connection Basics

- Slide the grip to the left and out to change the shim size to fit your mobile device snugly.
 - Connect your mobile device using the appropriate connection cable in your kit
- Connection indicator lights:
- **Red:** No connection
 - **Green:** Connection successful

Adjustable Grip with shim
Marker connection indicator

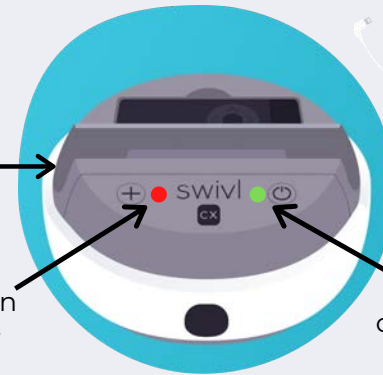

Connection cable for iOS
Mobile device connection indicator

2 Charging Basics

- Use the 3-port USB charging block and the black charging cable to plug the Swivl into an outlet.
 - A full charge lasts for approximately 4-6 hours of use.
- Charging indicator lights:
- Red:** less than 40% battery
 - Green:** More than 40% battery
 - Flashing:** charging

Charging port




Charge 1 marker in the marker cradle.



3 Marker Basics

- Your marker tracks you and collects audio.
- Maintain a line of sight with the **black sensor** on the front of Swivl when wearing the marker.
- Wear the marker on the **lanyard or clip** at heart height to get the best video and audio quality.

Center button: pause/start tracking

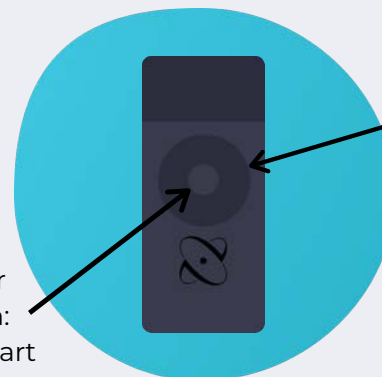

Directional arrows: manually control Swivl movement

****For more information about Swivl buttons and ports, see the Quick Start Guide included in your Swivl Kit.****

A note about firmware: Occasionally your Swivl will need a firmware update. Swivl app will notify you when an update is needed. Select "Update" to accept firmware update.